


This information provided by:




Gross Automation
www.grossautomation.com

Call Toll Free:
800-349-5827

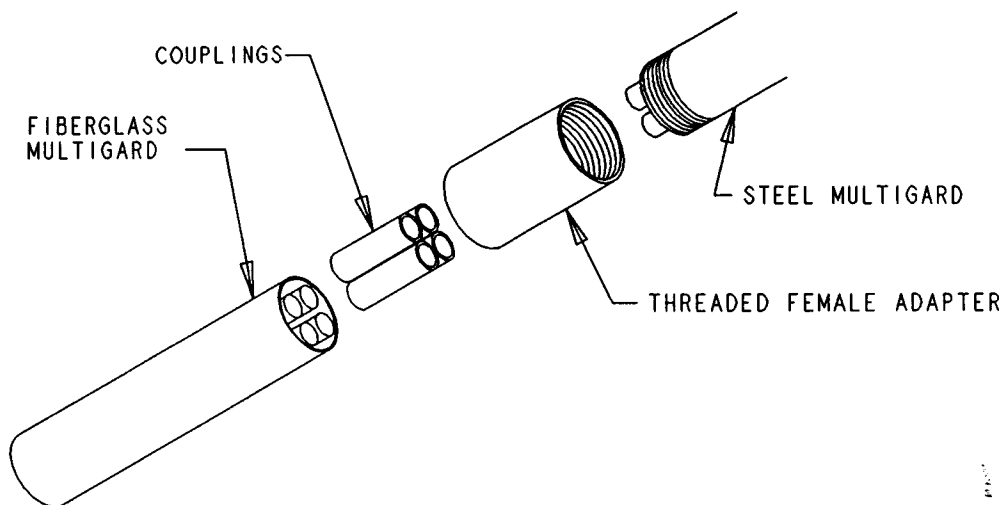

1. FORM A 8" CLEARANCE BETWEEN MULTIGARD SPIGOT ENDS.
2. SOLVENT CEMENT COUPLINGS ONTO INNERDUCT ON SPIGOT END OF STEEL MULTIGARD.
3. SCREW ON THREADED FEMALE ADAPTER TO EXISTING STEEL MULTIGARD.
4. APPLY SOLVENT CEMENT ON INNERDUCTS ON FIBERGLASS SIDE.
5. APPLY 2" OF EXPOXY TO OUTSIDE OF FIBERGLASS MULTIGARD END AND INSERT INTO END OF ADAPTER FITTING TAKING CARE TO ALIGN COUPLINGS TO INNERDUCT.

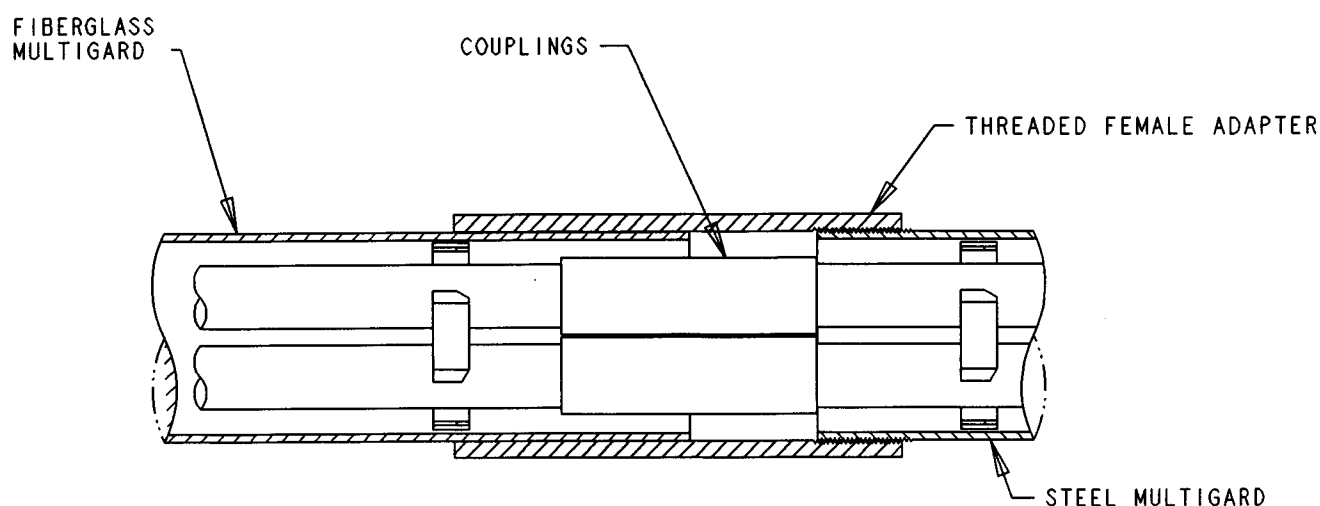

CATALOG NUMBER

M — AR —
 — 3 = 3-WAY INNERDUCT
 — 4 = 4-WAY INNERDUCT
 — S = STD WALL FIBERGLASS
 — H = HEAVY WALL FIBERGLASS
 — B = BULLET RES. FIBERGLASS

TITLE ADAPTER FITTING, FIBERGLASS TO STEEL MULTI-GARD

DRN
SLK

DATE
5-19-93

PART NO:

SEE CHART

LAMSON & SESSIONS

ALL DRAWINGS ARE THE PROPERTY OF LAMSON & SESSIONS AND SHALL NOT BE REPRODUCED IN ANY FORM WITHOUT LAMSON & SESSIONS' APPROVAL AND ARE TO BE PROMPTLY RETURNED UPON REQUEST.

APP.

EGH

DATE

8-31-99

DRAWING NO:

AC01387

REV.

C